

ARA CTA-2045 Module



INSTALLATION

Refer to your water heater owners' manual for universal communication module (UCM) installation instructions.

LED LIGHT INDICATORS

The light on the unit can be used to determine the device status as follows:

- **Flashing purple** – Device has not connected to the LTE network
- **Blinking (Red, Orange, Green)** – Device has connected to the LTE network, but has not connected to the server
- **Solid (Red, Orange, Green)** – Device has connected to the LTE network and the server

LED colors indicate the following:

- **Red** — Poor LTE connection
- **Orange** — Moderate LTE connection
- **Green** — Good LTE connection

Generac Power Systems, Inc.
S45 W29290 Hwy. 59, Waukesha, WI 53189
www.Generac.com | 888-GENERAC (436-3722)
CTA-2045 REV B

©2021 Generac Power Systems. All rights reserved.
Specifications are subject to change without notice.

GENERAC[®]